

RACETECH

Raceparts (UK) Ltd., Unit 3, Rockfort Industrial Estate,
Wallingford, Oxon., OX10 9DA

Email: sales@raceparts.co.uk

Tel: +44 (0) 1491 822000

Information for Electrical gauges

RTECW120	Water temperature
RTECOT150	Oil temperature
RTECOP8	Oil Pressure
RTECVM	Voltmeter
RTECFG	Fuel Gauge

Applicable Senders

RTECW1/8	Water temperature sender, 1/8NPT
RTECOT1/8	Oil temperature sender, 1/8NPT
RTECOPM10	Oil pressure sender, M10
RTECF5H	Fuel sender, 5 hole flange
RTECF6H	Fuel sender, 6 hole flange

P11 052 iss.1

Caution: Disconnect the Negative Battery Cable Prior to Installation

Instrument	Harness Connections			
	Green	Black	Red/White	White/Black
Coolant & Oil Temperature	Switched ignition +ve supply (via 3A fuse)	Chassis or battery negative	Instrument Illumination 12volt supply (side light feed)	Sender Input
Fuel	Switched ignition +ve supply (via 3A fuse)	Chassis or battery negative	Instrument Illumination 12volt supply (side light feed)	Sender Input
Oil Pressure	Switched ignition +ve supply (via 3A fuse)	Chassis or battery negative	Instrument Illumination 12volt supply (side light feed)	Sender Input
Voltmeter	Switched ignition +ve supply (via 3A fuse)	Chassis or battery negative	Instrument Illumination 12volt supply (side light feed)	Not Used