

## Fitting Instructions

We recommend you read all instructions and notes prior to beginning installation

### CAUTION

Disconnect the Battery Negative Cable Prior to Installation

Measure the internal depth of the fuel tank.

From the table, select pivot dimension and float arm radius against tank depth measured.

Slide the retaining clips and the float onto the flat arm wire and adjust to the correct radius. The clips can be pushed onto, or moved along the wire by squeezing the ends together.

**SAFETY PRECAUTION:** - Float arm wire is sharp. Take care when handling to prevent injury.

Slide the resistor box onto the rod, ensuring the orientation is as shown in the diagram, and adjust to approximately the correct pivot height. Mark the rod at the bottom of the lower adjusting bracket.

Remove the resistor box and cut off the excess rod below the adjusting bracket with a hacksaw.

Attach the square nut and bolt BUT DO NOT TIGHTEN.

Holding the resistor box, rotate the flange to the correct float arm orientation tightening the wire around the rod so that the wire does not interfere with the operation of the float arm.

Position the resistor box to the correct pivot height and orientation and fully tighten the screws until the surfaces of the adjusting bracket meet and the box is securely fastened to the rod.

Slide the gasket over the float, along the arm, over the resistor box and up to the underside of the flange.


Correctly orientate the gasket. For the five hole variant, position the notch in the gasket opposite the index hole in the fixing plate prior to inserting the unit into the tank.

Install the unit, float first, into the tank and align the screw holes with those on the mounting flange and sealing gasket.

Insert all mounting screws and tighten securely. DO NOT OVERTIGHTEN.

### Note:

- Prior to installing into tank, connect the gauge and the sender together to check the gauge reads full when the float arm is in the 'full' position and reads empty when the float is in the 'empty' position. (If your gauge is reading in reverse, it is likely that the resistor box has been fitted upside down - please check orientation with diagram).

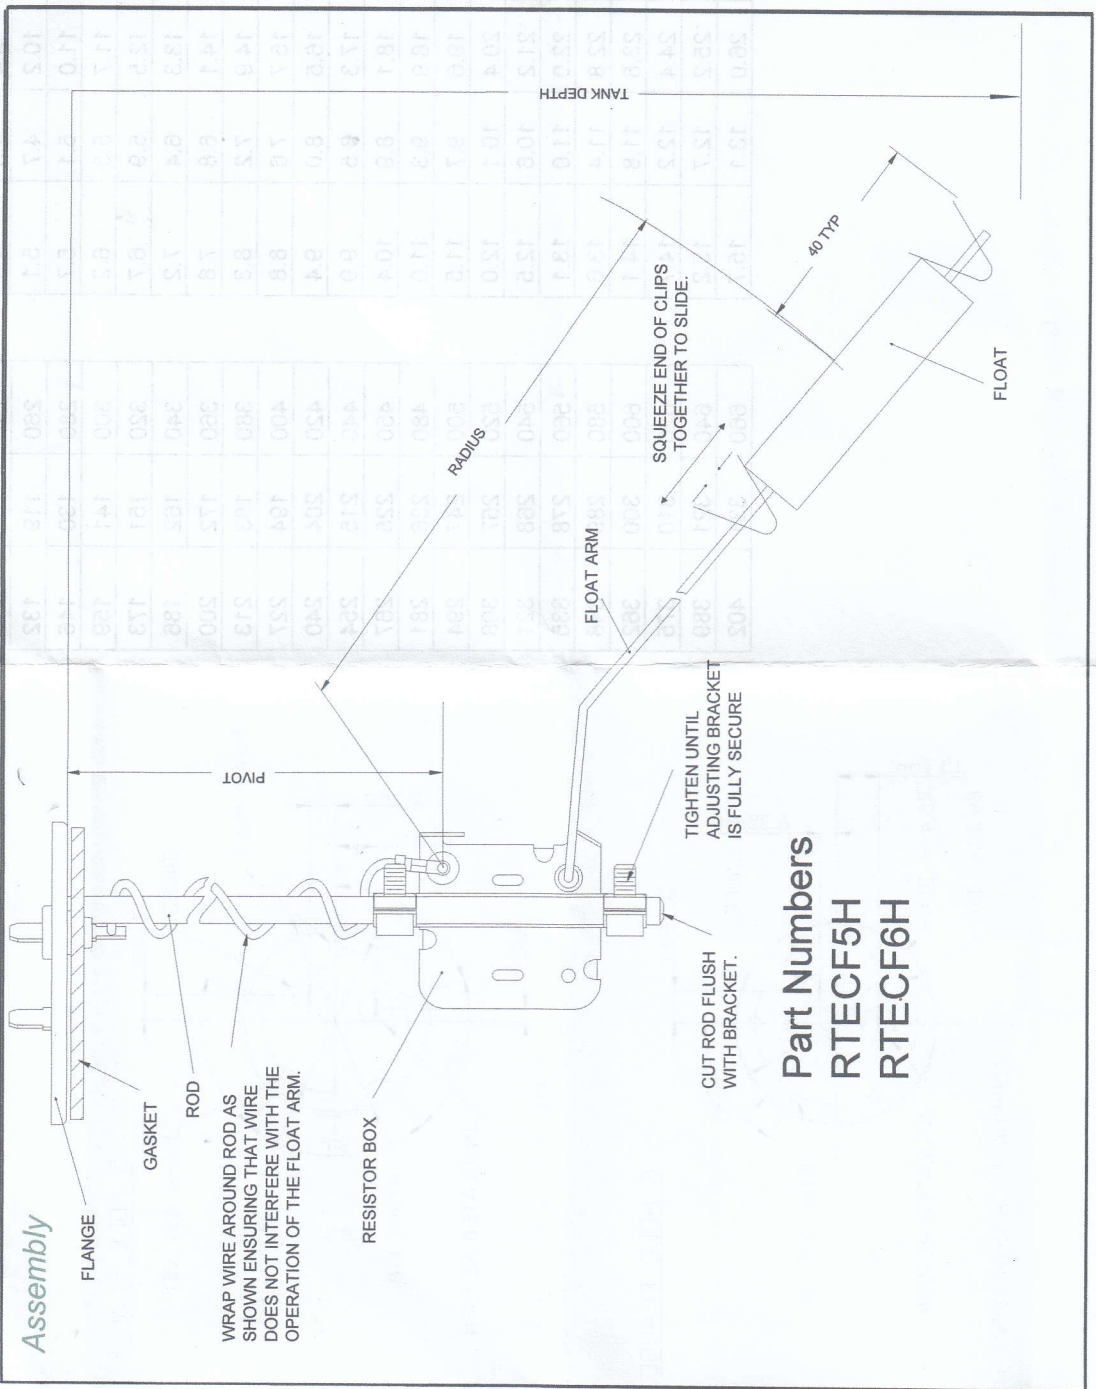

Part Numbers  
RTECF5H  
RTECF6H



## Calibration Tables


Imperial		Metric	
Depth	Pivot	Radius	Pivot
7.0	3.0	3.0	78
7.8	3.4	3.5	92
8.6	3.8	4.1	105
9.4	4.3	4.6	119
10.2	4.7	5.1	132
11.0	5.1	5.7	146
11.7	5.5	6.2	159
12.5	5.9	6.7	173
13.3	6.4	7.2	186
14.1	6.8	7.8	200
14.9	7.2	8.3	213
15.7	7.6	8.8	227
16.5	8.0	9.4	240
17.3	8.5	9.9	254
18.1	8.9	10.4	267
18.9	9.3	11.0	281
19.6	9.7	11.5	294
20.4	10.1	12.0	308
21.2	10.6	12.5	321
22.0	11.0	13.1	335
22.8	11.4	13.6	348
23.6	11.8	14.1	362
24.4	12.2	14.7	375
25.2	12.7	15.2	389
26.0	13.1	15.7	402

Imperial		Metric	
Depth	Pivot	Radius	Pivot
180	77	78	
200	88	92	
220	98	105	
240	109	119	
260	119	132	
280	130	146	
300	141	159	
320	151	173	
340	162	186	
360	172	200	
380	183	213	
400	194	227	
420	204	240	
440	215	254	
460	225	267	
480	236	281	
500	247	294	
520	257	308	
540	268	321	
560	278	335	
580	289	348	
600	300	362	
620	310	375	
640	321	389	
660	331	402	

## Dimensions for 5 and 6 hole flange fittings

### Notes:

- Modifications to fuel tanks should only be attempted with the tank removed from the vehicle, emptied, cleaned and dried.
- Recommended aperture diameter in tank 44.0mm (minimum diameter 43.0mm).

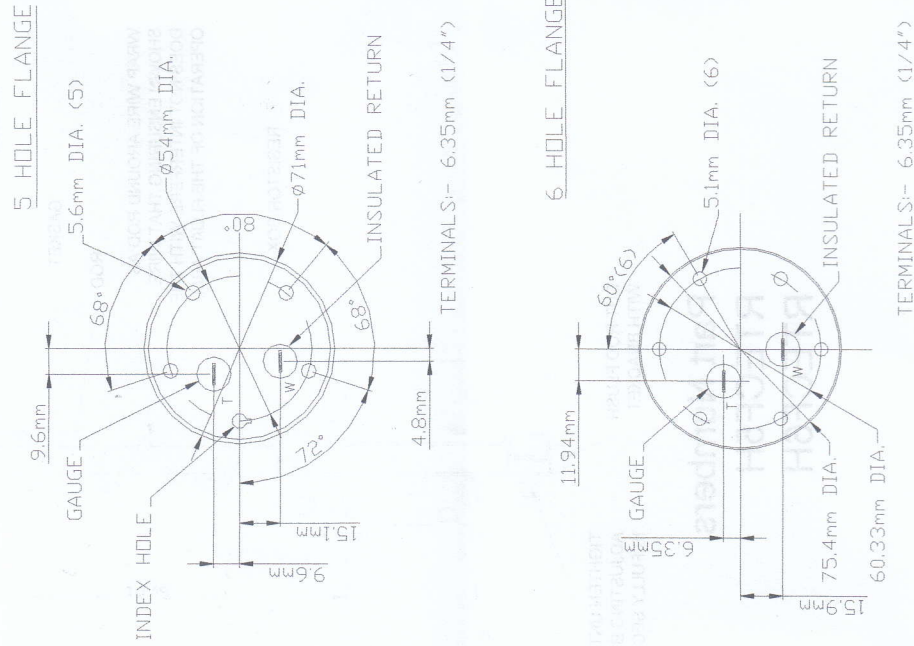

# RACETECH

Raceparts (UK) Ltd., Unit 3, Rockfort Industrial Estate,  
Wallingford, Oxon., OX10 9DA  
Email: [sales@raceparts.co.uk](mailto:sales@raceparts.co.uk)  
Tel: +44 (0) 1491 822000

## Information for Fuel Senders

Part No.	Description
RTECF6H	Insulated Return, 6 Hole fix, 10ohms empty to 180ohms full
RTECF5H	Insulated Return, 5 Hole fix, 10ohms empty to 180ohms full